

GOJO TFX™ REFILL LOADING INSTRUCTIONS

These instructions apply to GOJO®, PURELL®, PROVON® and MICRELL® TFX dispensers.


Please read all instructions carefully before loading the refill.

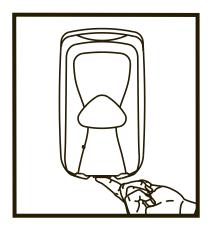

1. Open dispenser by pushing release on bottom of dispenser and pull down on front cover.

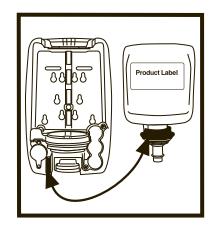


2. Check that the color of refill collar key matches color key located immediately below status light.

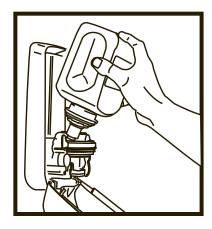

3. Insert refill at slight angle into dispenser so nozzle is inside lock release.



4. Fully insert refill down into lock release until refill clicks into place.

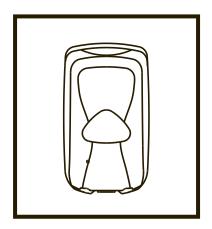

5. Close dispenser. Prime refill pump by placing hands below dispenser until product is dispensed.